ROLLIXO PREMIUM io QUICK START GUIDE

Initial Setup & Commissioning

A quick guide for qualified installers. For full installation and safety information refer to the official SOMFY Installation & Operating Manual.

ROLLERDOR ADVICE

- Read the full SOMFY Installation & Operating Manual before installation and commissioning.
- Use the "Help Me by Somfy" app for step-by-step guidance and support on site. (PRO)
- This guide covers the essential steps for a successful installation and commissioning.
- Your Rollixo Premium io control unit has been pre-configured by Rollerdor and is ready for commissioning.

1 MOUNT THE CONTROLLER

Remove the front cover and light cover.

Mount the control box to the wall using the mounting bracket supplied.

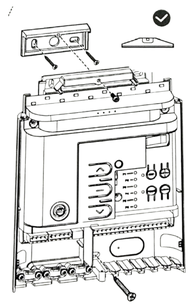

2 WIRE THE MOTOR

Connect the motor cable as shown.

TERMINAL	COLOUR	FUNCTION
4	Green/Yellow	Earth (±)
5	Brown	Motor L1
6	Blue	Motor N
7	Black	Motor L2

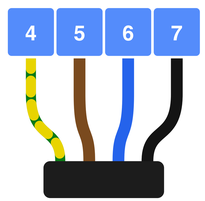

STOP INPUT (10 & 11)
Normally-closed safety input. The circuit must be closed for the unit to operate. Wire a manual override interlock here if fitted.

3 CONNECT THE MAINS SUPPLY

Connect the mains supply as shown.

TERMINAL	COLOUR	FUNCTION
1	Brown	Live (L)
2	Blue	Neutral (N)
3	Green/Yellow	Earth (±)

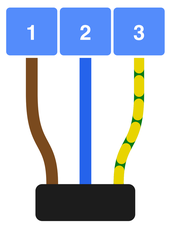

4 CONNECT HARDWIRED SAFETY EDGE (IF APPLICABLE)

Connect the safety edge to terminals 12, 13, and 14.

TERMINAL	COLOUR	FUNCTION
12	Green	(+ 24V)
13	Brown	(Signal)
14	White	(0V)

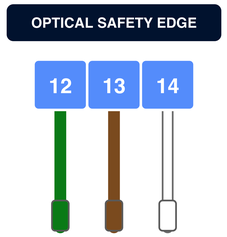

5 FACTORY CONFIGURED – NO CHANGES REQUIRED

Your Rollixo Premium io control unit has been pre-configured by Rollerdor.

The safety edge parameter has already been set to suit the supplied safety edge.

No changes to the P2 Safety Edge Parameter are required.

Do not change these settings unless instructed by Tradedor Technical Support.

6 SETTING MOTOR LIMITS

1. Set motor limits using the TD55 or TD77 installation guide, found in the resources section of your online portal.
2. Press and hold SET for 2 seconds to set automatic operation.

7 PROGRAM THE FIRST REMOTE

1. Press the PROG button for approximately 3 seconds until the light illuminates.
2. Press the bottom left and bottom right buttons on remote for 2 seconds. The green light on the remote will flash rapidly.
3. Press the desired button on the transmitter.
4. The LED flashes. Programming complete.
5. Repeat for all additional transmitters.

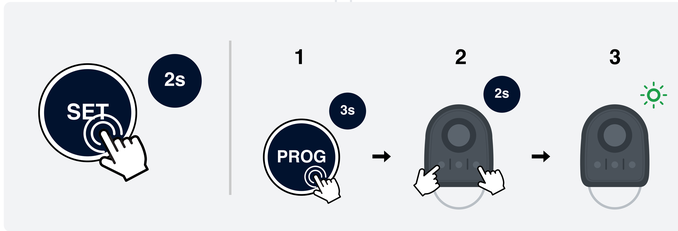

CONTROL UNIT OVERVIEW

Terminals	Function
1 2 3	Mains Supply 230V AC
4 5 6 7	Motor + Earth
8 9	Aux 230V AC output
10 11	Stop
12 13 14	Safety Edge
15 16	Key Switch
17 18	Flash
19 20	24V DC
21 22	24V Cell
23 24	Sec Cell
25	Test Sec
26 27	Antenna

Aux (8 & 9) is a 230V AC output rated 500W max (100W max for LED).
Cable: 1.5 mm² for terminals 1–9 (mains, earth, motor, aux). 0.75 mm² for terminals 10–27 (low voltage).

FINAL COMMISSIONING CHECKS

- Door opens fully and smoothly
- Door closes fully and smoothly
- Safety edge operates correctly
- Photocells (if fitted) operate correctly
- Flashing light (if fitted) operates
- Demonstrate operation to end user

INSTALLER TIPS

- For full details refer to the official SOMFY Installation & Operating Manual available online at www.somfy.info
- Use the "Help Me by Somfy" app for step-by-step guidance and support.
- Ensure all safety devices are installed and tested before commissioning.

STANDBY MODE (LOW POWER)

If standby mode is active, the LED on the control unit will flash slowly.

Slow flash = standby mode

The control unit remains in low power until a command is received.

ROLLERDOR TECHNICAL SUPPORT

01603 743215 sales@rollerdor.net www.rollerdor.net

ROLLERDOR ADVANTAGE

- Pre-configured before dispatch
- Ready for quick and easy commissioning
- UK technical support you can rely on

This guide is intended as a quick reference only.
Installation must be carried out by a competent person.
Always refer to the official SOMFYInstallation & Operating Manual before commissioning.

Revision 1.0
July 2026